


BUILDING STRONGER

WITH PPC

HOW TO PLASTER
A WALL

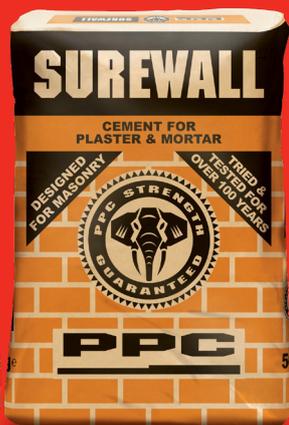

Get cash back every time you purchase a bag of PPC Cement



PPC

A STEP-BY-STEP GUIDE TO PLASTER A WALL

TOOLS

Wheelbarrow
Spade
Stiff bristle brush
Steel Trowel
Plaster Hawk
Straight-Edge Level
Block Brush or Spray Bottle
Wood Float
Builders Bucket
Spirit Level

MATERIALS


PPC SUREWALL
Plaster Sand
Potable Water

SAFETY

Safety shoes (steel toe)
Overalls
Gloves
Dust Masks
Googles

STEP 1
MIX YOUR
PLASTER

STEP 2
PLASTER
THE WALL

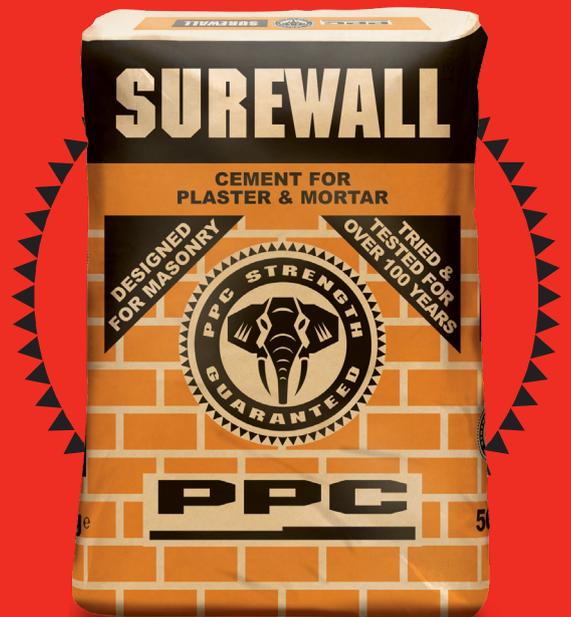


If you need technical or sales support,
contact 0800 CEMENT (236 368)
or visit ppc.africa

STEP ONE MIX YOUR PLASTER

1

Remove any lumps, stones or foreign objects from the plaster sand.




2

Make sure you mix on a clean, hard surface.

Fill each required wheelbarrow of plaster sand and strike it off level to the brim.

Place on a shallow heap on a plain hard and clean surface.


Use the PPC Builders App Calculator from ppc.africa to obtain the volume of plaster you require in cubic meters.

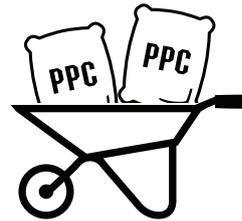

3


Add PPC SUREWALL cement on top of the plaster sand.

Mix PPC SUREWALL cement and plaster sand until uniform in colour.

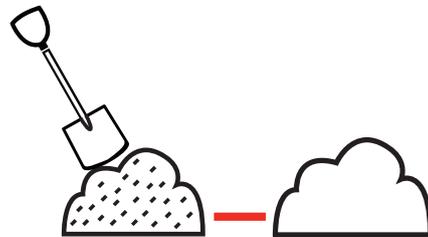

4

Create a hollow in the center and slowly add water while mixing until the consistence of a thick paste has been achieved.

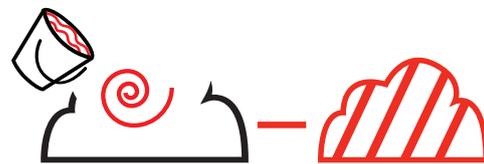


PPC

STEP TWO PLASTER THE WALL


1

The plaster should be just wet enough to be spread easily with a trowel, similar to margarine on toast. Remember that you do not need to pre wet cement bricks before applying plaster.

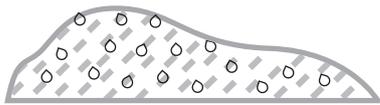


2

Place some of the plaster mix onto the hawk. Using the trowel, apply the plaster mix by either using a flicking motion to throw the mix onto the wall, or by using an upward motion while applying some pressure.

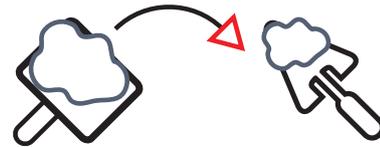

3

Plaster small areas at a time but try to do an entire wall without joints.

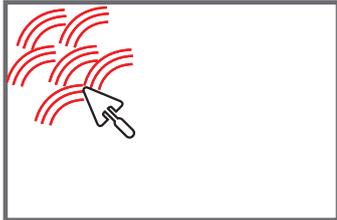


4

Once the plaster starts to stiffen, pull a straight edge across the plaster with a sawing motion, resulting in a flat surface.




5

Apply water with a block brush or spray bottle while compacting the surface using a wood float, to produce an even surface

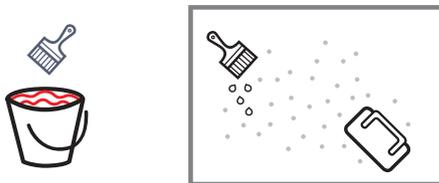

6

Prevent evaporation of water from the surface by applying a fine spray of water as often and as long as possible.

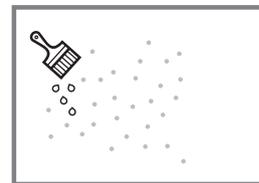

IMPORTANT NOTE: WHILE ALL INFORMATION IN THE GUIDE IS SUPPLIED IN GOOD FAITH, NO LIABILITY CAN BE ACCEPTED BY PPC AS ACTUAL USE IS BEYOND ITS CONTROL.

If you need more technical or sales support, contact us on our toll-free hotline 0800 CEMENT (236 368) or visit us at ppc.africa



PPC